


ABRAXIS[®] Microcystin-ADDA OH ELISA 520011OH


1. Addition of Standards, Samples

Add 50 μ L of the standard solutions, control, LCRC, LRB or samples into the wells of the test strips according to the working scheme given. We recommend using duplicates or triplicates.



2. Addition of Antibody Solution

Add 50 μ L of the antibody solution to the individual wells successively using a multi- channel pipette or a stepping pipette. Cover the wells with parafilm or tape and mix the contents by moving the strip holder in a rapid circular motion on the benchtop for 30 seconds. Be careful not to spill contents. Incubate for 90 minutes at room temperature.

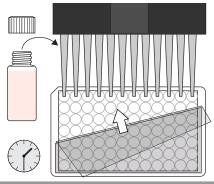


3.Washing of Plates

After incubation, remove the covering and vigorously shake the contents of the wells into a sink. Wash the strips three times with a multi- channel pipette using the 1X washing buffer solution. Please use at least a volume of 250 μL of washing buffer for each well and each washing step. Remaining buffer in the wells should be removed by patting the plate dry on a stack of paper towels.




4. Addition of Enzyme Conjugate

Add 100 μL of enzyme conjugate solution to the individual wells successively using a multi- channel pipette or a stepping pipette. Cover the wells with parafilm or tape and mix the contents by moving the strip holder in a rapid circular motion on the benchtop. Incubate for 30 minutes at room temperature.

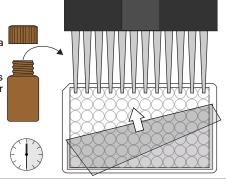


5. Washing of Plates

After incubation, remove the covering and vigorously shake the contents of the wells into a sink. Wash the strips three times with a mult- channel pipette using the 1X washing buffer solution. Please use at least a volume of 250 μL of washing buffer for each well and each washing step. Remaining buffer in the wells should be removed by patting the plate dry on a stack of paper towels.

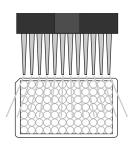


6. Addition of Substrate/Color Solution

Add 100 μ L of substrate/color solution to the wells using a multi-channel pipette of a stepping pipette. The strips are incubated for 20-30 minutes at room temperature. Protect the strips from direct sunlight.

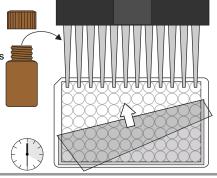


7. Addition of Stopping Solution

Add 50 µL of stop solution to the wells in the same sequence as for the substrate solution using a multi- channel pipette or a stepping pipette.

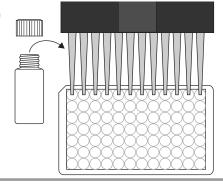

8. Measurement of Color

Read the absorbance at at 450 nm using a microplate ELISA reader. Calculate results.

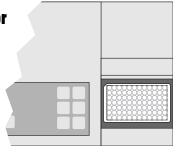

Gold Standard Diagnostics 124 Railroad Drive Warminster, PA 18974 WEB: www.abraxiskits.com T (215) 357 3911 F (215) 357 5232 Ordering: info.abraxis@us.goldstandarddiagnostics.com Technical Support: support.abraxis@us.goldstandarddiagnostics.com

Date this Flow Chart is effective: 22FEB2023

Version: 01